

# Quick Guide

14221-1100-1010

Rev. D, July 2020



EDACS®/Conventional/P25  
XG-75P/XG-75Pe  
Portable Radios



Radio Controls	
Top View	Side View
Power On-Off/Volume Control Knob	Rotate clockwise to apply power to the radio and increase the volume. Rotate counter-clockwise to decrease volume and power off radio.
System/Group/Channel Control Knob	A 16 position rotary knob for selecting systems or groups/channels (set during programming).
Emergency/Home Button	Pre-programmed to declare an emergency or select a pre-set Home group/system. One or the other can be assigned to this button.
PTT Button	The PTT button is pressed to transmit.
Option Button	Pre-programmed to activate one software option.
Clear/Monitor Button  (Option Button 2)	Trunked mode: Used to exit the current operation and terminate special calls. Conventional mode: Used to monitor channels and temporarily remove Channel Guard decoding from a channel.
A/B Switch Or A/B/C Switch	Can be configured for variety of functions. Refer to the operator manual for more information. Note: A/B/C switch only available on XG-75Pe models.

Radio Keypad Functions	
	<p><b>Locking/Unlocking Keypad</b></p> <ol style="list-style-type: none"> <li>Press the  button.</li> <li>Within 1 second, press the Option button  on the side of the radio.</li> </ol>
	Selects systems, groups, or channels. <b>Secondary Function:</b> Changes the selection for an item within a list.
	Accesses the pre-stored menu. <b>Secondary Function:</b> Activates a selected item within a list. (Similar to an "Enter" key.)
	(Scan Model) Adds/Deletes selected groups or channels from SCAN list of the currently selected system.
	(Scan Model) Toggles SCAN operation ON and OFF.
	(Scan Model) Activates one of any programmable software options selected during the PC programming, including: high/low TX power and talkaround.

Radio Keypad Functions (cont'd)	
	(System Model) Selects a specific system.
	(System Model) Selects a specific group.
	(System Model) Toggles SCAN operation on and off.
	(System Model) Enables Private mode for the system/group/channel displayed.
	(System Model) Adds groups or channels from the currently selected system to the SCAN list.
	(System Model) Accesses the status list (0-9). The Status key permits the transmission of a pre-programmed status message to an EDACS or P25 site.
	(System Model) Accesses the message list (0-9). The Message key permits the transmission of a pre-programmed message to an EDACS or P25 site.
	(System Model) Deletes a selected group or channel from the SCAN list of the currently selected system.
	(System Model) Initiates telephone interconnect calls.
# IND button"/>	(System Model) Initiates individual (unit-to-unit) calls.
	Inverts display – Toggle normal/invert. Requires ECP R16B or later.
<b>1 - 9</b> <b>* 0 #</b>	(System Model) Keys used to place telephone interconnect and individual (unit-to-unit) calls. Functions as a telephone keypad.

Alert Tones	
<i>(T) = trunked only (B) = both trunked and conv modes</i>	
Ready-to-Talk (B)	One short mid-pitched tone. OK to talk after pressing PTT button.
Call Queued (T)	One high-pitched tone. Call queued for processing.
Autokey (T)	One mid-pitched tone. Queued call received channel assignment.
System Busy (T)	Three low-pitched tones. System busy or unable to complete the call.
Call Denied (T)	One low-pitched tone. Radio not authorized on the system or group.
Carrier Control Timer (B)	Five high-pitched tones and one long low-pitched tone. PTT pressed for too long.
Low Battery (B)	One low-pitched and one short mid-pitched tone. Low battery. Replace battery immediately.
TX Low Battery Alert (B)	<i>Transmit Lockout:</i> One low-pitched tone after PTT. Battery too low to transmit.
Attach Battery Pack	
	<ol style="list-style-type: none"> <li>Align the tabs at each side on the bottom of the battery pack with the slots at the bottom of the battery cavity.</li> <li>Push the top of the battery pack down until the latches click to attach the battery to the radio.</li> <li>Tug gently to verify that the latches are secure and the battery pack is properly attached to the radio.</li> </ol>
Remove Battery Pack	
	<ol style="list-style-type: none"> <li>Pull both latches on either side of the battery pack toward the bottom of the radio simultaneously.</li> <li>Pull the battery away from the radio.</li> <li>Remove the battery pack from the radio.</li> </ol>

Display and Status Icons	
	Radio is transmitting.
	Radio is transmitting/receiving a call, call is queued.
	T99 Mode is enabled.
	Channel Guard (CG) enabled.
	EDACS trunked system is in Failsoft™ mode.
	Selected group/channel set at low power TX. If icon is not visible, TX at high power.
	Radio is transmitting or receiving an encrypted call.
	Selected talk group/channel is operating in P25, ProVoice, or analog conventional mode.
	Rotating clockwise – scan mode enabled.
	Selected talk group/channel is a Priority 1, 2, or “in the scan list.” The talk group or channel isn’t in the scan list if a priority icon isn’t associated with it.
	Special call select/entry mode (Individual or Telephone Interconnect).
	Gauges approximate battery voltage level. “Empty” indicates low battery.
	Noise cancelling is enabled.

Radio Status Messages	
<b>CC SCAN</b>	Control Channel Scan mode - Trunked mode only. Control channel lost, searching for a control channel.
<b>WA SCAN</b>	Wide Area Scan mode - Trunked mode only. Radio searching for a new system.
<b>TALKARND</b>	Talkaround mode - Conventional mode only. Radio operating unit-to-unit.
<b>SYSC ON</b>	System Scan Features On - Trunked mode only.
<b>SYSC OFF</b>	System Scan Features Off - Trunked mode only.
<b>LOW BATT</b>	Low Battery - Battery charge too low to transmit.
<b>RXEMER</b>	Receive Emergency - Trunked mode only. Indicates an emergency call is being received. This message will be flashing on line two.
<b>TXEMER</b>	Transmit Emergency - Trunked mode only. Indicates an emergency call has been transmitted on this radio. This message will be flashing on line two.
<b>WHC</b>	Who Has Called - Trunked mode only. Missed Individual call.
<b>UNKNOWN</b>	Unknown ID - Trunked mode only. Individual call being received from an unknown ID.
<b>QUEUED</b>	Call Queued - Trunked mode only. Indicates the system has placed the call in a request queue.
<b>SYS BUSY</b>	System Busy - Trunked mode only. System is busy, no channels available, queue is full, or individual call being made to radio already receiving a call.
<b>DENIED</b>	Call Denied - Trunked mode only. Radio or group not authorized on selected system or group.

**NOTICE!**

The material contained herein is subject to U.S. export approval. No export or re-export is permitted without written approval from the U.S. Government. Rated: EAR99; in accordance with U.S. Dept. of Commerce regulations 15CFR774, Export Administration Regulations.

Menu
<b>Trunked Mode</b>

The menu key allows access to features that are not available from the keypad.

1. Press the key to enter menu mode.
2. Use the or button to scroll through the available menu items.
3. Press the key again to select the item.
4. Depending upon the item selected, further scrolling using the or button may be required.
5. Press the key again to return to the active display.

**Transmit a Group Call**

1. Select the group.
2. Press the PTT button and speak normally while holding the microphone approximately two inches from your mouth.
3. Release the PTT button when finished speaking and wait for a reply.

**Receive a Group Call**

1. Listen to the call.
2. The Group name or “GRxxxx” appears in the display to indicate a call is being received.
3. Press the PTT button to respond and speak normally while holding the microphone approximately two inches from your mouth.
4. Release the PTT button when finished speaking and wait for a reply.

Trunked Mode (cont'd)
<b>Trunked Mode</b>

**Transmit an Individual Call (System Model)**

1. Press the button to access individual call list. appears.
2. Use the or button to scroll through the individual call list or enter the Logical ID (LID) number from keypad.
3. Press the PTT button and speak normally while holding the microphone approximately two inches from your mouth.
4. Release the PTT button when finished speaking and wait for a reply.

**Receive an Individual Call (System Model)**

1. Receive audio sounds when a call is received and the display reads: appears.
2. Press and hold the PTT button to respond. Radio continues to ring until PTT is pressed or originating radio disconnects.
3. If call is cleared with no response, the radio stores the ID in **Who Has Called** (WHC) list and display: \*WHC\*.
4. Press the key to display ID. Press PTT button to return call or press Monitor/Clear button to clear \*WHC\*.

**Transmit a Telephone Interconnect Call (System Model)**

1. Press the button to access phone call list. appears.
2. Follow steps 2 through 4 in “Transmit an Individual Call” above.

**Receive a Telephone Interconnect Call (System Model)**

1. Receive audio sounds when call is received and the display reads: \*PHONE\*.
2. Follow Steps 2 through 4 for “Receive an Individual Call.”

Conventional Mode
<b>Conventional Mode</b>

**Transmit a Call**

1. Select the conventional system and channel.
2. Press the Monitor/Clear button briefly. If audio is heard or is illuminated, then the channel is busy.
3. When the channel becomes available, press the PTT button and speak normally while holding the microphone approximately two inches from your mouth.
4. Release the PTT button when finished speaking and wait for a reply.

**Receive a Call**

1. Select a conventional system and channel or turn Scan on and make sure desired channel is in Scan list.
2. When the radio receives a call, the radio unmutes and the channel name or number appears in the display.

**Declare an Emergency**

1. Press and hold the red Emergency/Home button.
2. and are illuminated in the display and \*TXEMER\* flashes in the display. After 2-3 seconds, turns off.
3. \*TXEMER\* and remain illuminated in the display until the emergency is cleared.
4. Press the PTT button and reappears. Speak normally.
5. Release the PTT button when transmission is complete. Press and hold the Clear/Monitor button, then simultaneously press the emergency button to clear an emergency (if enabled through programming).

For more detailed operating information and a list of options and accessories, refer to Operator’s Manual 14221-1100-2010, available online at [www.pspc.harris.com](http://www.pspc.harris.com).

About L3Harris Technologies

L3Harris Technologies is an agile global aerospace and defense technology innovator, delivering end-to-end solutions that meet customers’ mission-critical needs. The company provides advanced defense and commercial technologies across air, land, sea, space and cyber domains.